

**Scorpion
User guide for
Commander Series ESC's**



Written By Aidan Kelly

SAFETY

- ⚠ Scorpion and their re-sellers are not responsible for your use of this product, or any damage or injuries you may cause or sustain as a result of it's usage.
- ⚠ Understand that an electric motor that is connected to a battery and speed control may start unexpectedly and cause serious injuries. Always treat them with necessary respect. Keep the propeller away from your body and others at all times.
- ⚠ We suggest that you remove the propeller when you are working on the plane with the battery connected.
- ⚠ We suggest that you remove the pinion when working on a Helicopter with the battery connected
- ⚠ Please observe all local laws regarding the flying of remote control aircraft.
- ⚠ Never fly over others or near crowds.

Included in the BOX

- 1 x Scorpion Commander Series ESC
- 1 x IR Program card
- 1 x IR Receiver
- 1 x Instruction Manual

Commander Series

The Scorpion Commander Series of ESC;s are made up of three different types of ESC's classified by the maximum voltage they can handle and the type of BEC they possess. Please identify which ESC's you are using as it will help you with setup in the manual.

1. 15V LBEC
2. 26V SBEC
3. 50V OPTO

Battery Eliminator Circuit (BEC)

Each of the three Commander series above has its own type of BEC. If you do not wish to use the inbuilt BEC please remove or cut the red wire as shown in section 1.0 Connecting your ESC. You should not use the inbuilt BEC if:

- You wish to use a receiver battery in your model
- You are using more servos than is recommended for your ESC (shown below)

1. The Commander **15V LBEC** series feature a Linear BEC that will convert the voltage from your battery pack to 5.0 volts to power your receiver and servos. **The Commander LBEC will deliver the amps specified on the esc Heat Sink.** Please note that the more voltage you input into a linear BEC the lower the available current will be so if running 4S with more than 2 servos we recommend the use of a separate BEC. The Linear BEC will operate from 6 to 15 Volts. **Please note:** the 15V 60A LBEC Heli ESC will supply 6v to your receiver and servos upto 3S or 11.1v from you main battery.
2. The Commander 26V SBEC series feature a inbuilt switching BEC that will convert the voltage from your battery pack to 5.7 volts to power your receiver and servos. The Commander SBEC will deliver 3 amps of continuous current with 4 amp bursts. **And can handle upto 4 digital servos or upto 6 standard servos.** With a Switching type BEC, you do not need to de-rate the BEC as the input voltage increases. The full 3 amps of BEC current is available for any input between 2-cell and 6-cell Li-Po operation.
3. The Commander 50V OPTO series of ESC's have no inbuilt BEC so you will need to use a separate BEC or receiver battery to power your receiver and servos.

1.0 Connecting your ESC



1.1. Add your battery connector

You must attach a quality battery connector of your choice to the red (+) and black (-) power wires. Solder the battery connector to the wires. ENSURE THAT THE POLARITY IS CORRECT (red wire to battery red wire, black wire to battery black wire). Follow the instructions provided with the battery connector.

1.2 Connect Motor to ESC

Cut the three (red, yellow & black) motor wires coming off the ESC to the length you require. We recommend using bullet connectors to connect your esc to your motor as scorpion motors come with pre-installed bullet connectors that include a female set for your ESC. Solder the corresponding connectors for your motor to the wires coming from the ESC, or solder the motor wires directly to the motor leads. You may find it convenient to temporarily connect the motor leads to the ESC and test for proper rotation before you permanently solder them. See "Reversing Rotation" below. Once connected DO NOT allow any exposed wire or connectors to contact each other, insure that proper insulation around each of the three wires is achieved, Heat shrink is the best material for this job.

1.3 Connect to your receiver

Connect the receiver lead (the three colored small wires with a black plastic connector on the end) to the throttle channel on your receiver. Do not connect a receiver battery pack to the receiver, as the Scorpion ESC will supply power to the receiver and servos through the receiver connector. Only the 50V OPTO Speed Controller does not supply power to your receiver

1.4 Reversing Rotation (if necessary)

Bench test the motor and speed control after the

connections are made to determine the rotation of the motor. To change the rotation of the motor, swap ANY two motor wire connections, or use the scorpion programming card included with your esc to change the rotation direction.

1.5 Mounting the ESC

Mount the ESC with the Heatsink side of the controller facing outward. We recommend using Velcro to attach the ESC to the airframe for easy removal. Double sided tape is also acceptable. If zip ties are used, do not place them over any of the components on the ESC. Instead, zip tie around the motor and battery wires, leaving some slack to allow for movement. The 50V OPTO Series have mounts that allow you to screw the ESC into a frame or something similar.

2.0 Using your scorpion ESC

2.1 Ensure that the ESC is connected to the proper channel on your receiver.

2.2 Turn your transmitter ON and set the throttle stick to zero throttle.

2.3 Connect the main power battery to the speed controller.

2.4 The ESC will beep the motor (4 tones) to indicate that it is armed.

⚠ The ESC will not provide any power to the motor, if the throttle stick is anywhere higher than zero throttle when the main battery is plugged in. To arm the esc ready for use you, You must move the throttle stick to zero then disconnect and re connected the battery.

⚠ Always power your radio transmitter before powering up the receiver and/or the ESC. Some receivers with failsafe features or Spektrum receiver units that are not bound on receiver power up are entirely capable of causing the arming sequence to occur and command the ESC to drive the motor. Always keep the aircraft restrained and clear of body parts when the ESC is powered.

⚠ If your ESC cannot sense any radio signal it will beep the motor and flash orange on the LED continuously

3.0 Scorpion Commander features

ALL Scorpion ESC programming features are available through the use of the ESC programming card included with your ESC. So there is NO need to purchase any other cables or cards to allow you to program your ESC properly

Scorpion ESC's come with default or factory settings which are recommended for most applications. Programming options can be changed at the discretion of the user. See section 6.0 for programming instructions

Features:

Safe Power up	To arm the controller, the throttle must be held in the "Brake/Zero" position (all the way down). If throttle is not at zero at startup, the ESC will not provide any power to the motor regardless of where the throttle stick is positioned when first powered up.
Loss of signal (fail safe)	The Scorpion will stop the motor as a safety feature when the throttle signal is lost or corrupt for 3 seconds. If a signal is regained the user will have instant control again.
LED (Only on 26V and 50V Series)	The LED is used for programming/startup confirmation of your scorpion esc. Once armed the LED can be set to give an indication of low battery conditions
Low Voltage Cutoff	You can choose for your ESC to stop or reduce power when the input battery voltage drops to a preset/programmed cutoff voltage.
Current Limiting	Amp output limit, the output is rated at 10% over the rated Amp. At approximately 10% over the rated Amps it will automatically limit the output to the motor, as long as the motor is not rated too much over the ESC spec limits, this safety mechanism will prevent a over load to the ESC but if you install a motor for example rated at 100 amp on a ESC that are rated for only 60Amp, this mechanism will not work properly due to the instant surge of power demand from the motor, it may shutdown too early or simply fry the ESC, the only solution to this is to never use a Motor that has a rating bigger then the ESC, don't even

	think you can use it if you run the motor at a slower RPM or load, it will not work!!
Thermal Protection	At 95 degree C, the ESC will slowdown the power output to the motor by 50% (the on board LED will flash red), to re initiate full throttle you need to move the throttle stick to idle position and then the ESC will resume normal output once you throttle up again. If your ESC is over 60deg on startup it will not arm red LED will flash and a DI DI DI sound will be played.
Brake	Stops rotation of the motor when the throttle signal is moved to the lowest position.
Throttle	Airplane and Heli modes come pre programmed and can be selected by the user
Electronic timing	Manual settings that may improve the efficiency of the system for some motors are available. The standard Scorpion setting is to automatically detect and adjust for the motor it is driving.

4.0 Initial setup


You MUST perform throttle range setup before the first use of the ESC. Remove propeller/pinion from motor while performing initial throttle range setup.

- 4.1 Throttle range setup (full throttle and stop)
- 4.2 Turn on transmitter and set throttle to maximum position be sure that your throttle is set at 0% minimum throttle and 100% at maximum throttle
- 4.3 Place the switch on the IR Receiver to PPM (see section 5.0) Connect battery to ESC.(On 50V OPTO ESC's you will need to apply power to the receiver before connecting the battery to the ESC). After few seconds you will hear 2 beeps come from the motor to indicate you are in throttle calibration mode and maximum throttle position has been set. (If at this time, you leave the throttle stick at maximum position for over 10 seconds, the ESC will reset itself to Factory default throttle settings)

4.4 Move throttle to minimum position within 10 seconds and hold throttle at minimum position. Then you will hear 2 beeps indicating minimum throttle position is set and confirmed. Your ESC will also arm after you have set the minimum position. You only need to do this once as throttle range will be stored in the memory of the speed controller. You can reset the throttle range by performing steps 4.1 to 4.4 again

5.0 Connecting your Scorpion SBEC to the programming card

Your Scorpion ESC is programmed using the Infrared (IR) Program card and Receiver included with this ESC. First you must connect your IR Receiver to your ESC. Ensure the brown wire from your esc is facing outwards

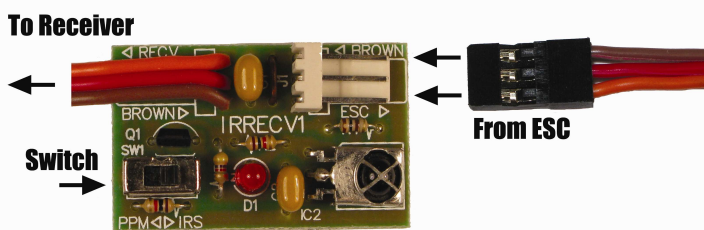

5.1 Turn on your transmitter

5.2 Once you have plugged in the IR Receiver push the switch across to IRS.


5.3 Now connect a battery to the ESC. Your motor will emit 3 beeps and for 26V and 50V Controllers the LED will flash 3 times red .

5.4 Your IR Receiver is now ready to receive a signal from the program card.

- ⚠ please note that IR will be interfered in direct sunlight so to program your model we suggest doing it indoors in the shade out of direct sunlight
- ⚠ before flying you will need to place the switch back to PPM mode

6.0 Using the Programming Card

All parameters of the esc can be changed via the program card.

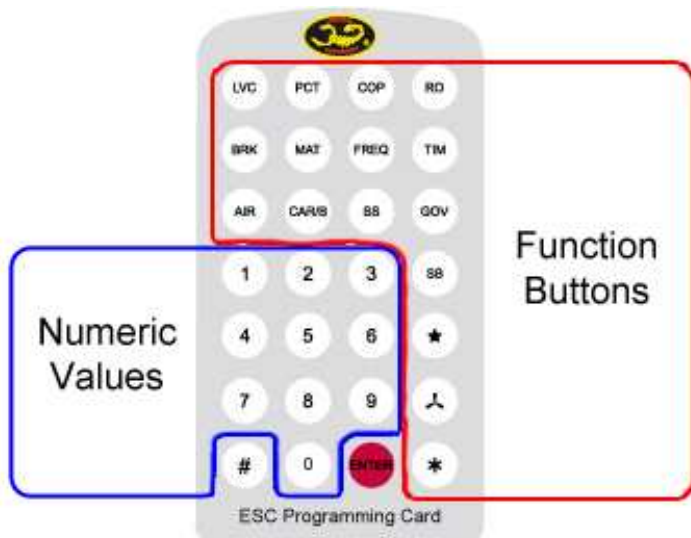

To program any function on the card you must follow the following procedure:

- 6.1 Press a function button
- 6.2 enter a numeric value
- 6.3 Enter to complete

Example Low Voltage Cut to enter 9.5V Press "LVC" Press "0" Press "9" Press "5" then "ENTER" If successful a DI DOO sound will come from the motor and the LED will Flash RED. An invalid option will not get any confirmation sound from the motor and the LED will not flash

⚠ Please note that there is a time limit from when you press a function button the numeric values and enter if you go over this time limit no sound of flashes will come from the esc

Function Button	Numeric Value	What it does
Example from Above	095	Sets Low Voltage Cut to 9.5Volts
LVC 15V ESC (Low Voltage Cut)	050-138	Low Voltage Cut 050 (5V) to 138(13.8V) in 0.2 V increments . *6V
LVC 26V ESC (Low Voltage Cut)	050-230	Low Voltage Cut 050 (5V) to 230(23V) in 0.5 V increments . *6V
LVC 50V ESC (Low Voltage	050-480	Low Voltage Cut 050 (5V) to 480(48V) in 0.5 V increments .

Cut)		*6V
BRK (Brake Setting)	1* 2 3 4 5	* No brake Very soft brake Soft Brake Hard Brake Very Hard Brake
AIR	1*	Activate Airplane mode
PCT Program Cut Type (LVC type)	1* 2 3	Cut 50% of maximum power No Cut just LED warning Pulse warning
MAT Motor Acceleration Time Delay	1* 2 3 4 5	0.15 second 0.3sec 0.45sec 0.7sec 1.3 sec
CAR/B Car/Boat mode	Disabled	Disabled
COP Current Overload Protection	1* 2	Protection on Protection off (this option will void warranty)
FREQ Drive Frequency	1* 2 3	8khz (recommended for most Brushless motors) 18khz (for use with low inductance motors) 32khz (for use with VERY low inductance motors)
SS Soft Start	1 2	Heli mode with soft start, variable throttle* adjustable soft start. Heli mode with soft start and governor. (See Govenor Section)
RO Motor Rotation direction	1* 2	Clockwise Counter clock wise
TIM Motor Timing	1* 2 3 4	Auto Timing 5° 15° 20°

	5	25°
	6	30°
GOV Governor Correction See section 9.0	1 2* 3 4 5 6	Soft Medium Hard Soft Medium Hard
SB Motor Start Booster	1* 2 3	Soft Medium Strong
★ Soft Start Duration	1 2* 3	Short 10 Seconds Medium 15 Seconds Long 20 Seconds
ENTER		Enter value send signal to ESC
OTHER		All other keys are reserved for future programming options

***Factory Default**

7.0 Lights and Sounds

Your ESC will emit different lights and sounds according to the function it is applying below is a table of the following conditions:

No Signal from receiver at startup	LED light will flash orange with constant 2 warning tone. If Using program card, the LED will flash red and emit 3 beep tones then you will enter setup mode
Loss of signal during operation	LED will flash red with a 2 beep warning tone
Over temperature during power up (>60°C)	LED will be constant red with 2 beep warning tone. To restart, disconnect power source, wait for cool down then re-connect.
Over heat during operation (>85 °C)	Power reduced to half throttle , red LED will flash. To reset throttle must be put into idle position
Power on low	LED will flash red quickly with beep warning tone

voltage warning	when voltage is low than the preset cut-off voltage.
Low voltage cut warning	When voltage is lower than preset cut off voltage, red LED will flash rapidly red.
Over Amp Protection	Is only activated at over 50% throttle during over-amp protection, LED will flash red rapidly
Governor Limit Warning	If governor reaches 100% throttle, orange LED light turn on.
Soft start indication	Orange LED light will turn off automatically when soft start has been deactivated.

8.0 Trouble Shooting

- If you hear a pulsed warning tone and/or see a continuous orange flashing LED after powering up the ESC: Check your transmitter. Is it on? If yes.
- Check that your throttle is at its minimum position. Your esc will not arm if you throttle is anything other then zero at startup
- Check the ESC servo connection? Connection good? If yes.
- Check the motor connection to the ESC, reconnect them if necessary. Check your battery. Fully charged? Replace battery if necessary. Try another receiver.
- Disconnect battery and then reconnect battery and start at step 2.0 again
- Motor does not shut off with throttle hold set throttle hold position to 0%
- After initiating esc with throttle hold on motor spins slowly when turned off > Set throttle hold to 0%

9.0 Governor Function for helicopters

Scorpion has developed a inbuilt governor that uses complex mathematics and fast processor speeds to provide one of the most user friendly and advanced governors on the market today.

Please follow the below steps to setup the governor on your ESC.

What it does

A Governor is designed to Govern the speed of your main rotor blades. In basic terms this means that the ESC will try to keep the same rotor blade speed (set by you) regardless of the amount of pitch on the main blades and load on the motor. To do this the ESC tracks the motors speed and will automatically increase or decrease the power to the motor to maintain constant rpm or headspeed.

What it allows you to do

- Push 3D performance to the limits by giving you more power when you need it while keeping the rotor speed constant at other times
- Give you consistent flight feel from start to finish; unlike some ESC governors, RPM does not drop as battery voltage drops (as long battery can provide enough power)
- Takes the Guesswork out of setting up Throttle Curves

Programming the Governor

Before programming the governor you must perform the Initial Setup in section 4.0 in this manual first

Items you will require

Head Speed Tachometer

1. Insure you have the IR Receiver Plugged in Refer to Section 5.0 of this manual
2. Remove the motor pinion
3. Power ESC (50v OPTO series Power Receiver then Power ESC)
4. Move Switch of IR Receiver to Program mode see section 5.0
5. 3 beeps will sound you are now in program mode
6. Press SS > 2 > Enter. 2 beeps will sound confirming SS 2 mode selected

Radio Setup

1. Set your throttle hold position in your radio to 0%

2. In your radio you need to set your throttle curves to the % of throttle you wish to operate your governor at. It is a good idea to use a head speed calculator first to find out an estimated target HS you wish to achieve.
3. Once you have estimated the amount of throttle needed to achieve your target head speed enter it into a throttle curve so that it is the same % of throttle across the entire range eg I would like 80% throttle for all points across the curve you should have flat line at 80%. **You can only select values from 50-90% throttle**
4. You can have different throttle values for each flight mode and you can flick between them in mid flight with no effect on the governor as long as it has been set properly at initial startup

Startup Procedure (Read all steps before attempting)

1. Turn on your radio and place throttle hold switch to ON
2. If using the 50V OPTO ESC you will need to power your receiver
3. Plug your ESC to the main power battery
4. Wait for it to arm (4 beeps di di dee do)
5. Select the flight mode you wish to fly in
6. Insure your blades are at 0 degrees pitch (If your blades are not at 0 deg your governor will not set itself properly)
7. Turn throttle hold switch OFF
8. Soft start will initiate – Depending on the soft start duration you have set 10,15 or 20 seconds wait on this amount of time for the blades to stabilize speed. (if you have the 26V SBEC or 50C OPTO esc's the LED will glow orange during startup and will turn off once the headspeed has been set and stabilized)
9. Measure the blade speed at 0 deg pitch with a tachometer or similar device to see if you are achieving the desired headspeed.
10. If the Head speed is to high go back into your throttle curve and reduce the throttle or if it is to low increase your throttle curve

Auto Rotation Bail out Feature for Soft start and Governor modes

If you attempt an autorotation once you have switched your throttle hold switch you have a 12 second time window where if you feel you cannot make the auto rotation you can switch the throttle hold off and your helicopter will instantly regain throttle to either your stick position in Soft start mode or your set governor throttle %.

Governor Correction (GOV) button

Modes 1-3 will **not** compensate for no load conditions. For example if you are hovering and pitch down (negative pitch) the power needed to keep the motor at the set RPM will be less the ESC will allow the rotor blades to fall the to right speed under their own weight

Modes 4-6 **Will** compensate for no load conditions. For Example if you are hovering and pitch down (negative pitch) the power needed to keep the motor at the set RPM will be less the ESC will apply a slight amount of brake to will allow the rotor blades to fall the to right quickly.

What does this all mean?

In modes 1-3 your main blades may have a tendency to over speed so you may get a less consistent headspeed. In modes 4-6 your main blades will be governed more actively giving you a more consistent headspeed. But this will also make your gyro will have to compensate for the reduction in torque on the tail blades more quickly If you are using a high end gyro this will not be an issue.

Abbreviated Terms

ESC = Electronics Speed Controller

LED = Light Emitting Diode

V = Volts

IR = Infra Red

RPM = Revolutions Per Minute